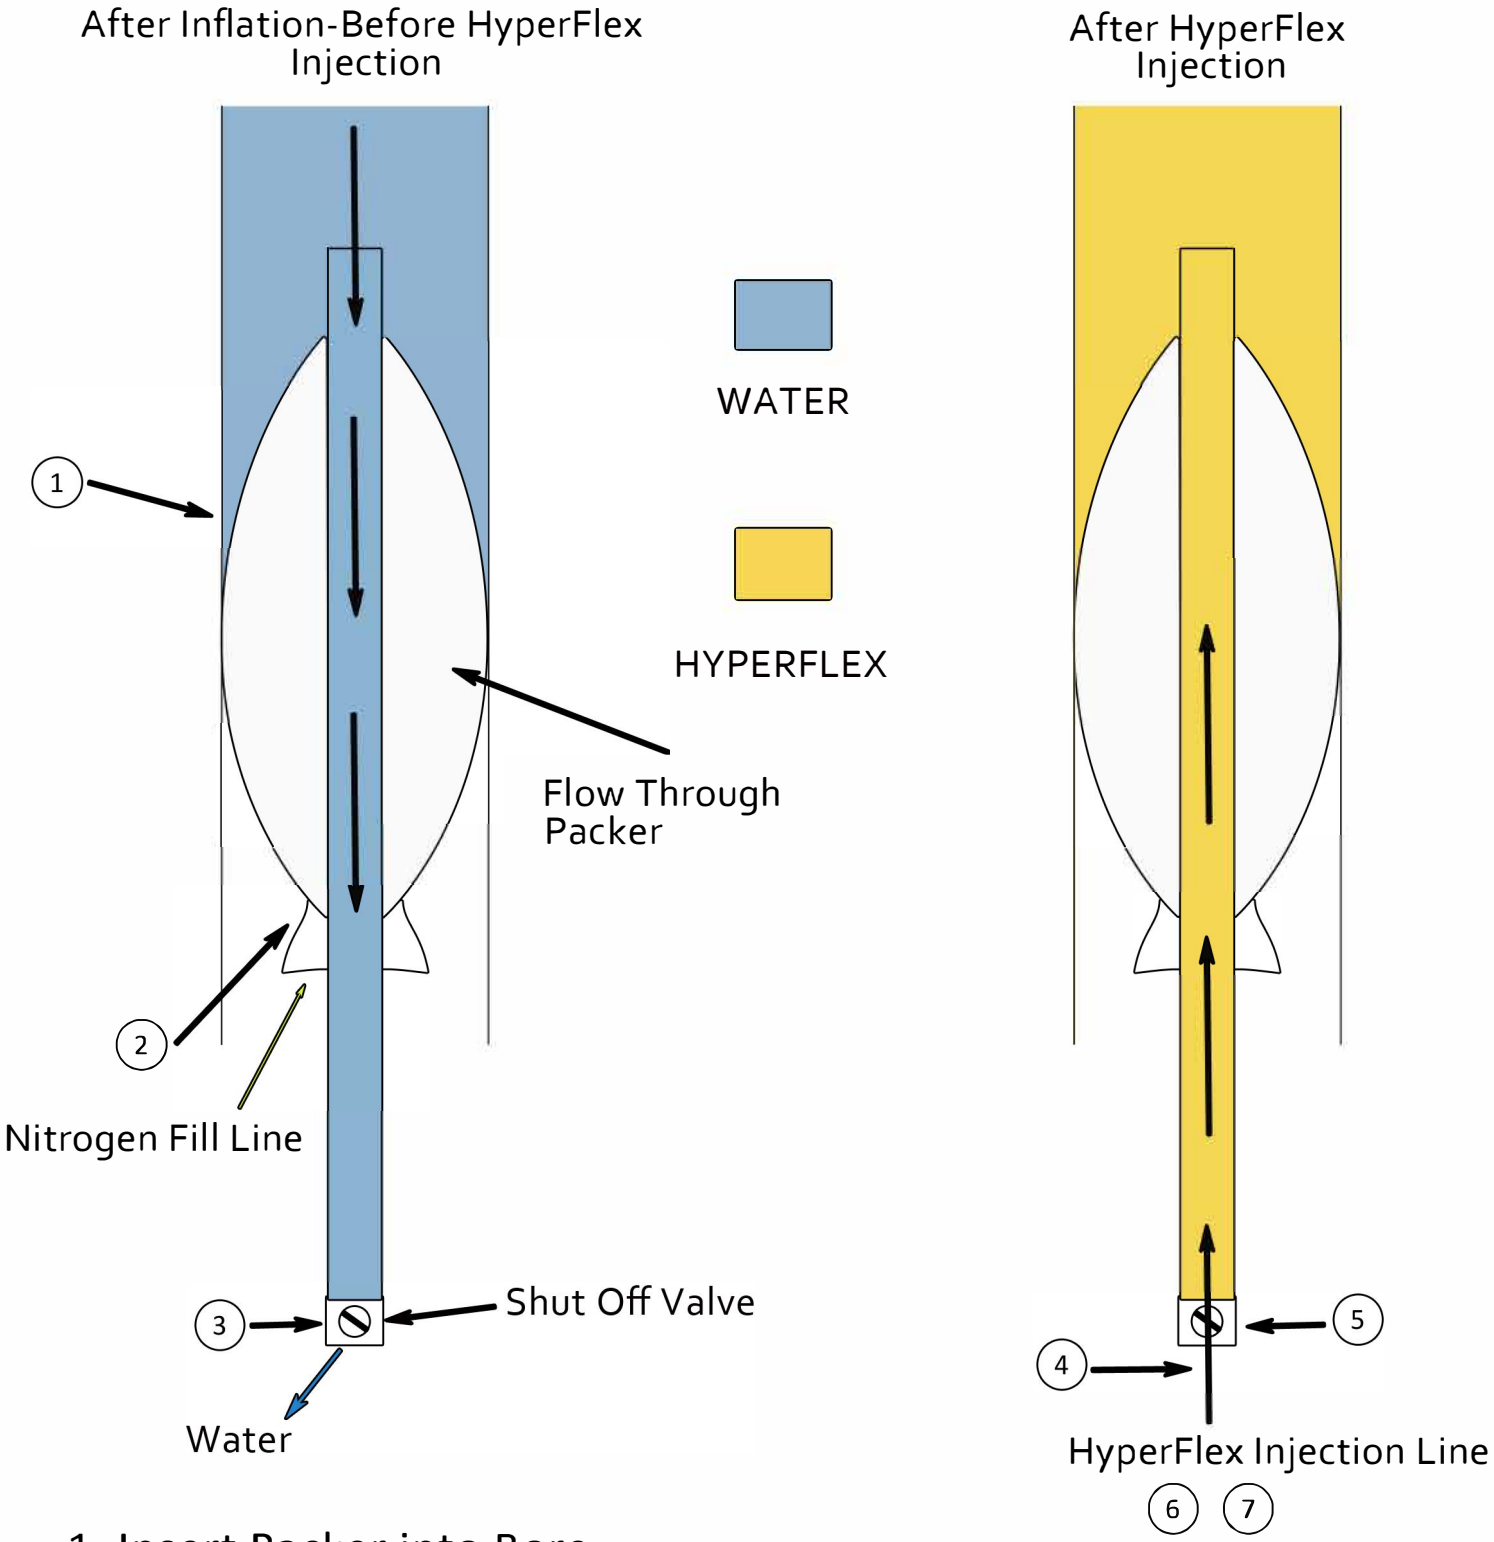

1. Insert Packer into Bore
2. Inflate & close Nitrogen valve
3. Close water shut off
4. Connect injection line
5. Open water shut off valve
6. Pump to pressure rise, sealing
7. Disconnect injection line

Orphan Bore Hole Sealing

SealGuard inc
PO Box 1178
Mars, Pa 16046
866-625-4550
www.sealguardinc.com